


# Audio settings for USB sound adapter on PS4

## Part ONE:


### 1. Settings

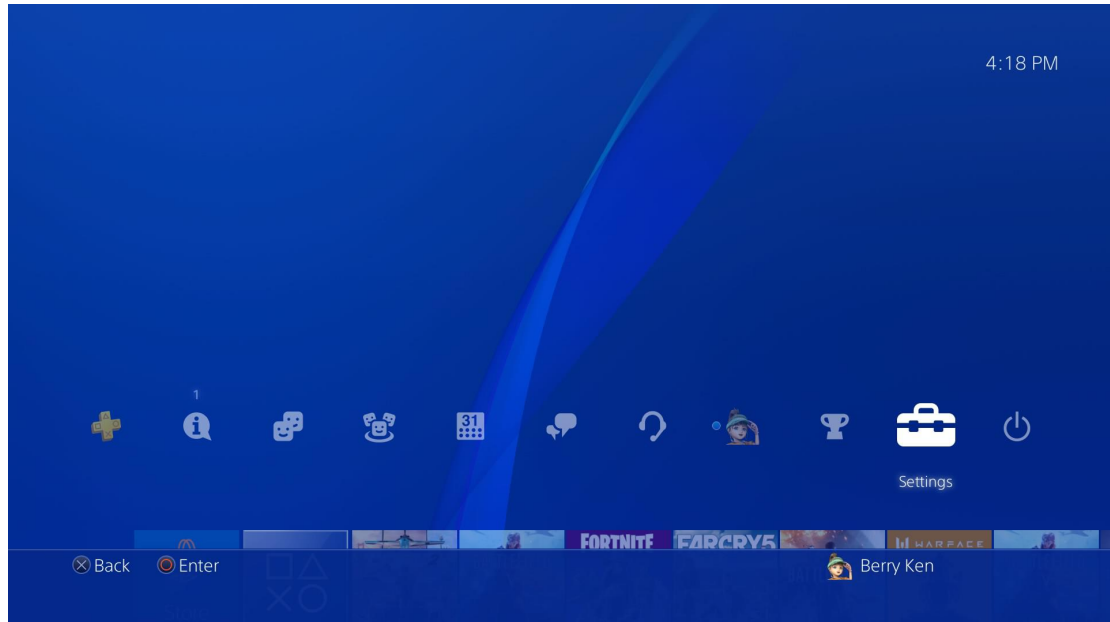


### 2. Devices




### 3. Audio Devices

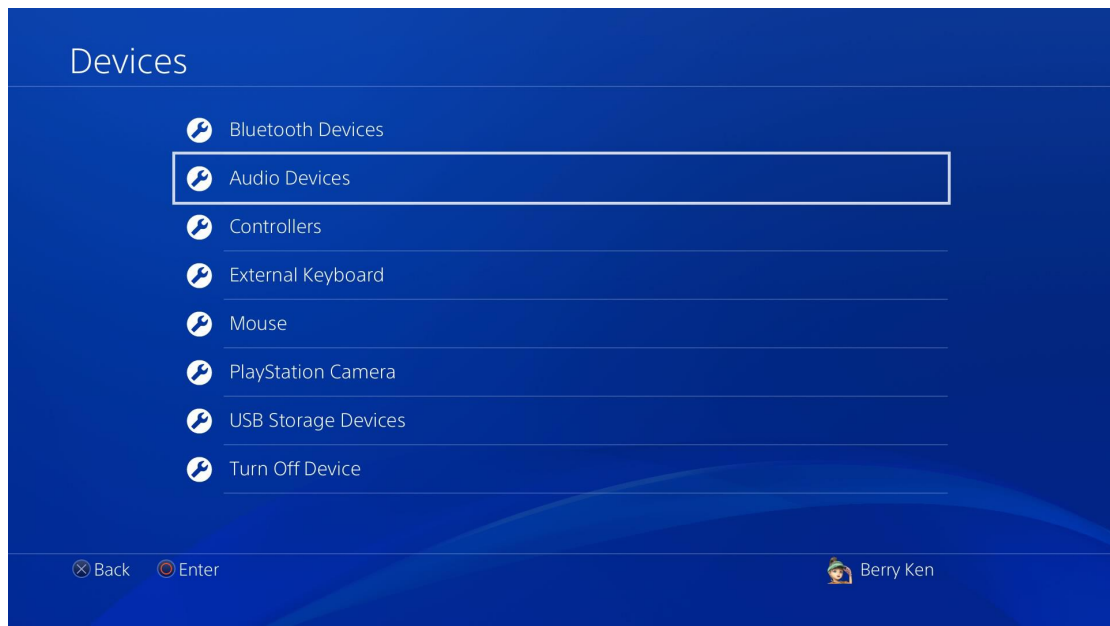

#### 4. Switch Output Device Automatically=ON

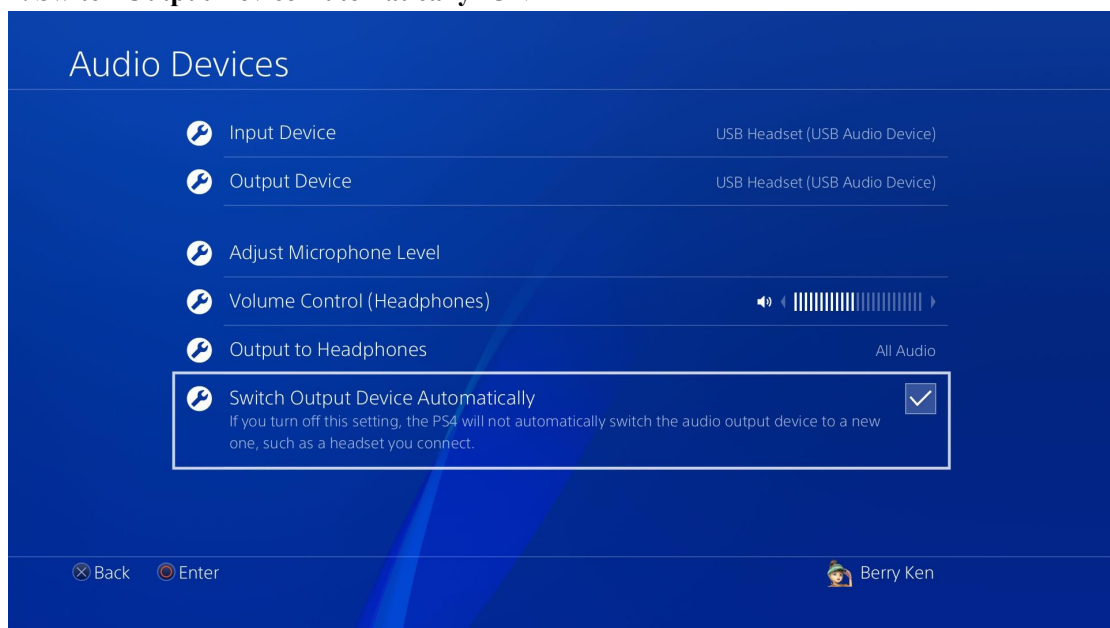

#### 5. Choose "All Audio" or "Chat Audio" for "Output to Headphones"

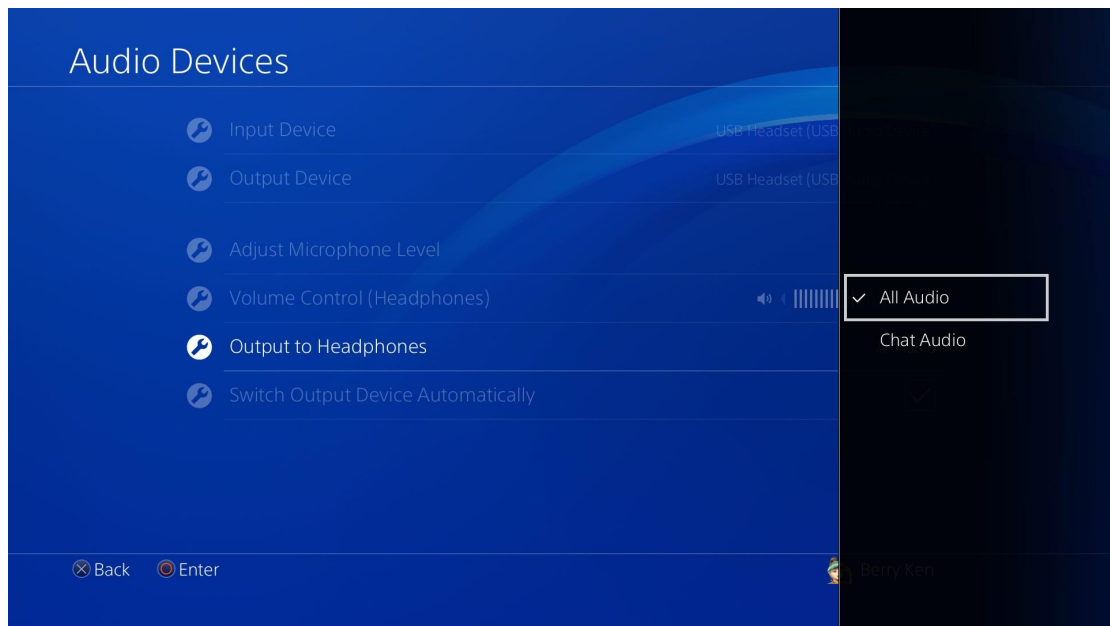


If “All Audio” is your choice, please go to **Part TWO** for further info.

If “Chat Audio” is your choice, there is no need for further settings.

## Part TWO:

### 1. Settings

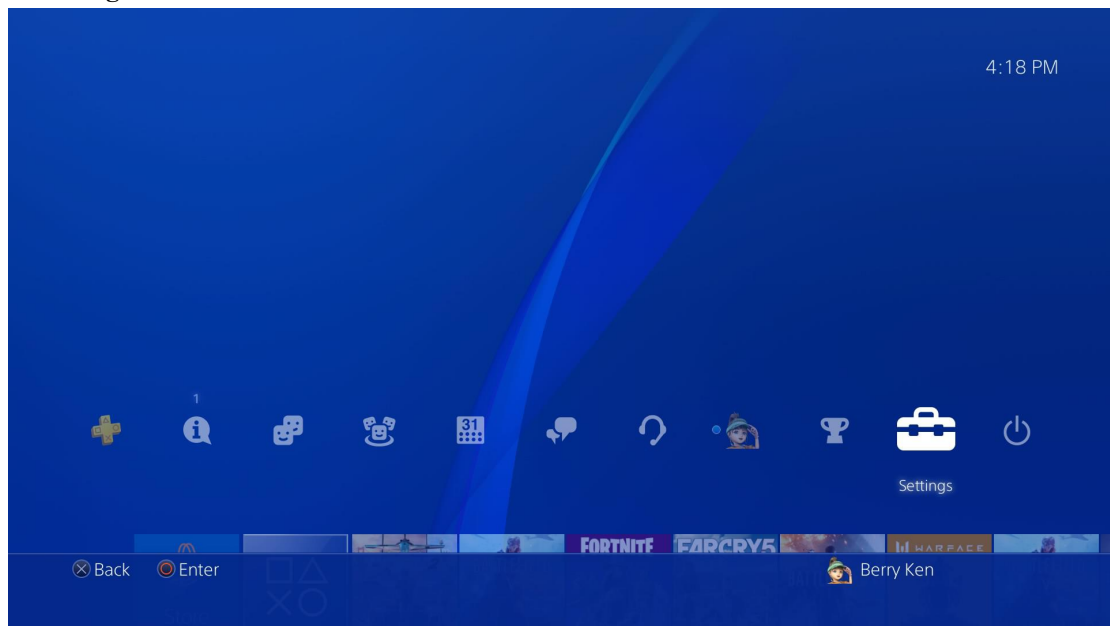

### 2. Sound and Screen



**3. If “All Audio” is your choice in **Part ONE**,  
Please enable “System Music” and “KeyTone” here.  
So you can hear all the sound in headphone.**

