

Most of the warnings are due to failing to follow the instructions. Do not worry about that, it can be solved easily.

Warning and Solution				
LED color	Beep	APP Error Code	Cause	Solution
RGB cycle			On console: 1.unstable connection between ReaSnow S1 and console 2.controller is not turned off On PC: 1.unstable connection between ReaSnow S1 and PC 2.connect ReaSnow S1 to a USB 3.0 port	On console: 1.try a new USB cable between ReaSnow S1 and console, or a new USB port 2.turn off the wireless controller before wiring On PC: 1.try a new USB cable between ReaSnow S1 and console, or another USB port 2.connect ReaSnow S1 to a USB 3.0 port
flashing red			No config	Add a config in ReaSnow S1
stable red	1	A00100010001	failed to enumerate authentication controller	try a new USB cable for controller, or check controller's connection
stable red	2	A00100010002	wrong authentication controller	connect a proper controller to USB 1
stable red	3	A00100010003	authentication controller disconnected	try a new USB cable for controller, or check controller's connection
stable red	4	A00100010004	authentication failure	try a new USB cable for controller, or check controller's connection
stable white	1	A00100030005/6	incompatible config(0005) or macro(0006)	restore factory defaults with Flash Tool
stable white	2	A00100020002	Out Of Memory error	unplugging and replugging ReaSnow S1, or report to ReaSnow Team
stable white	3			
stable white	4			
off	1		corrupted firmware	restore factory defaults with Flash Tool
off	2	A00100030002	corrupted config	restore factory defaults with Flash Tool
off	3		abnormal firmware	restore factory defaults with Flash Tool
off	4		abnormal boot	restore factory defaults with Flash Tool
stable blue	1	A00100040001 A00100040004 A00100040005 A00100040006 A00100040007 A0010004010x A0010004020x	ESD or instantaneous high-load current	unplug and replug ReaSnow S1
stable blue	2	A00100040002	Low voltage error	remove high power-consuming peripherals
stable blue	3	A00100040003	USB HOST error	unplug and replug ReaSnow S1
stable blue	4		Bluetooth chipset error	unplug and replug ReaSnow S1, or report to ReaSnow Team
flashing green			config authorization expired	contact the config provider
stable green	1		corrupted BOOT	Return ReaSnow S1 for repairing, if this happens repeatedly
stable green	2		hardware failure (HUB)	Return ReaSnow S1 for repairing, if this happens repeatedly
stable green	3		hardware failure (BT)	Return ReaSnow S1 for repairing, if this happens repeatedly, or report to
stable green	4		hardware failure (Crys)	Return ReaSnow S1 for repairing, if this happens repeatedly