


ReaSnow C1 Firmware Upgrade Manual

A. ReaSnow C1 Firmware Upgrade Program Installation


1. Download the firmware upgrade program
2. Double-click to open it. The program interface is shown in the figure.




3. Click "Next". The interface is shown in the figure.

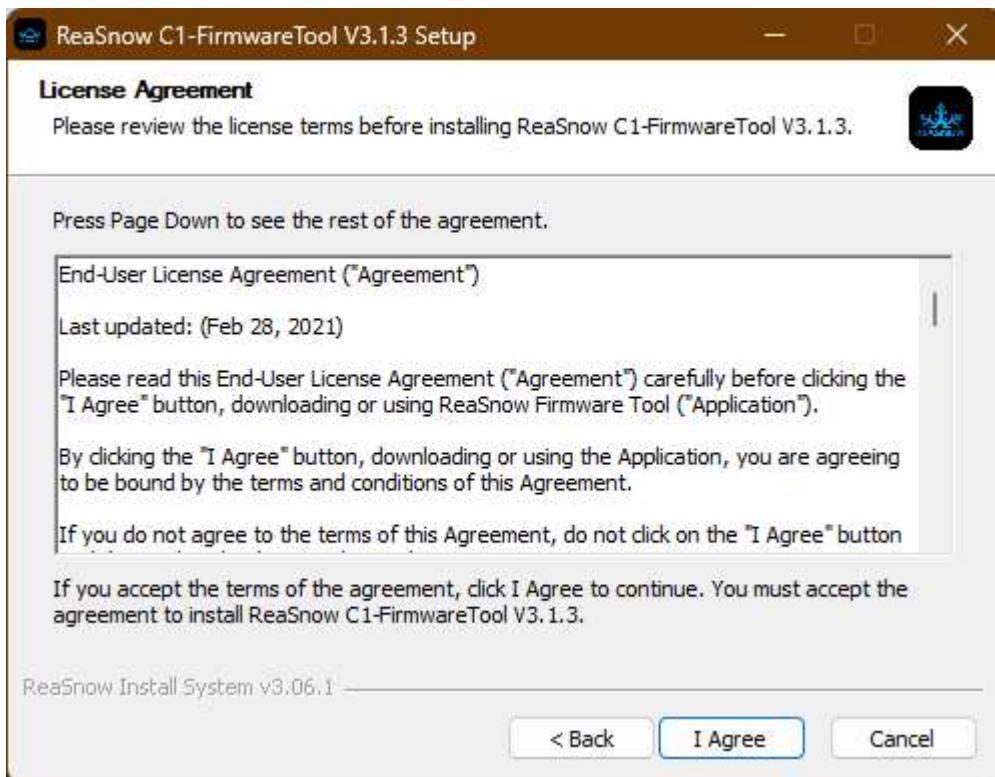


4. Click "I Agree". The interface is shown in the figure.

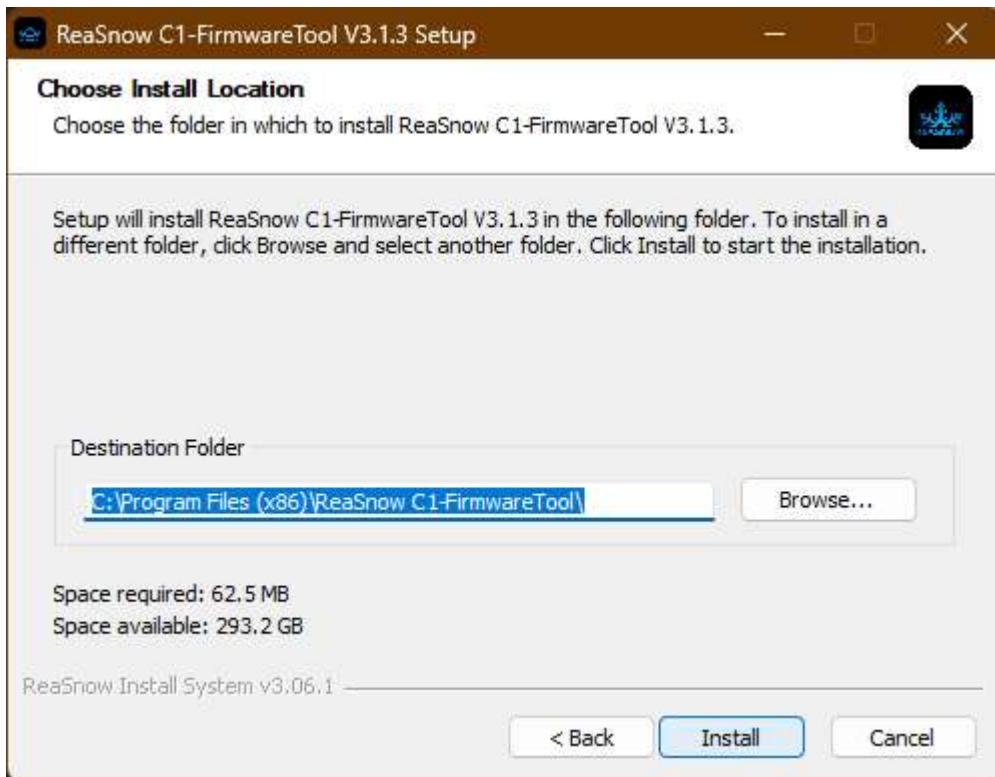

5. Use the default installation path. Click "Install" to begin installing the firmware upgrade program.

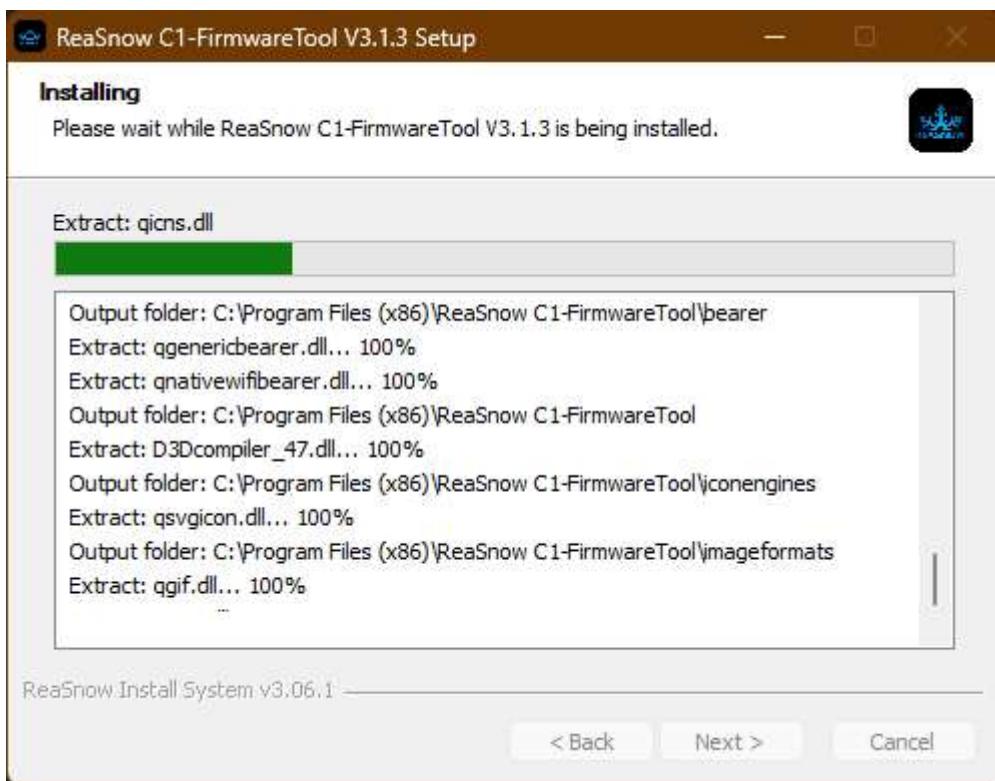

6. Click the blue checkbox, then click "Finish" to complete the firmware upgrade program installation.

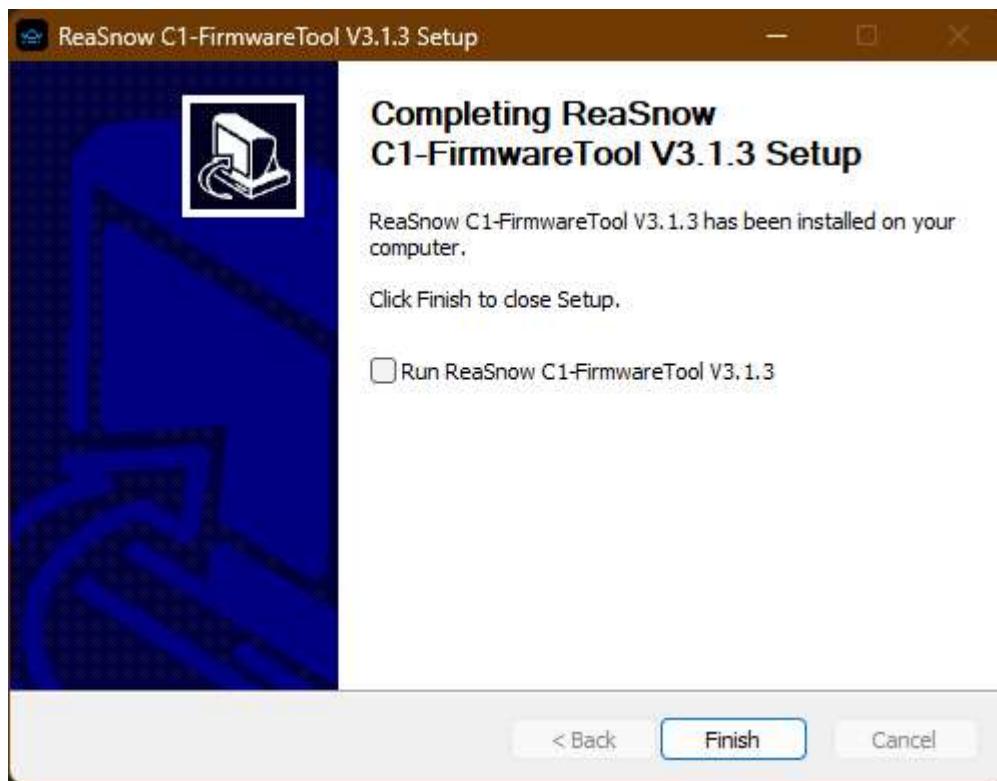


B. ReaSnow C1 Firmware Upgrade


1. Double-click the ReaSnow C1 firmware upgrade program shortcut on the desktop.




The program running interface is shown in the figure.

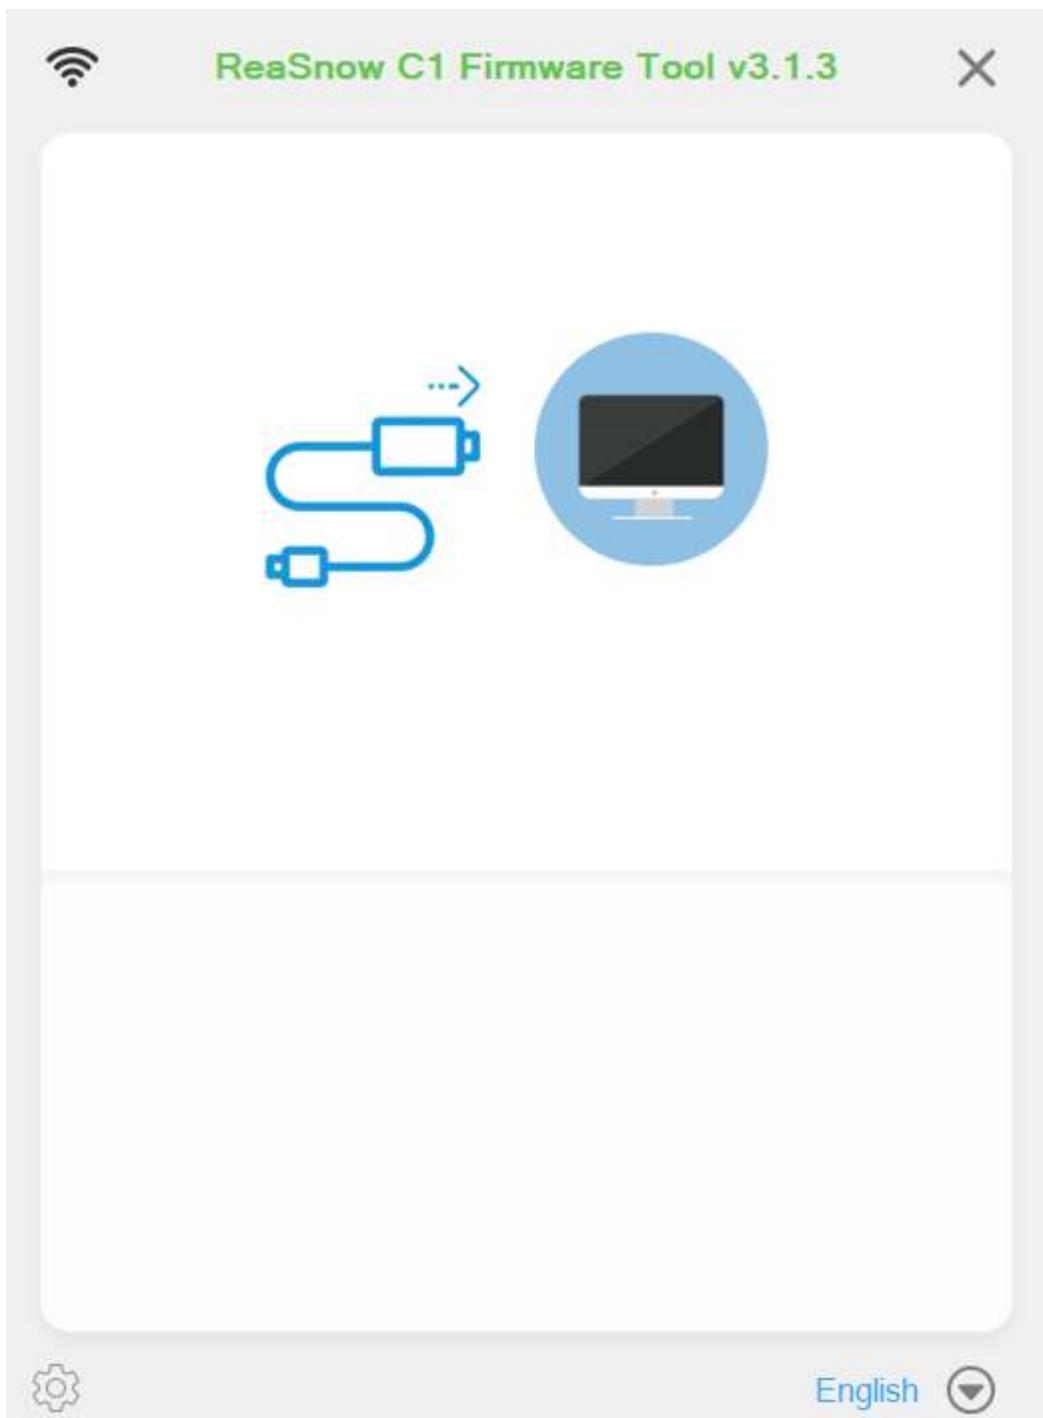

2. Insert the ReaSnow C1-A (the larger end of the C1 device) into the computer USB port. The firmware upgrade program interface that recognizes the C1 connection is shown in the figure.

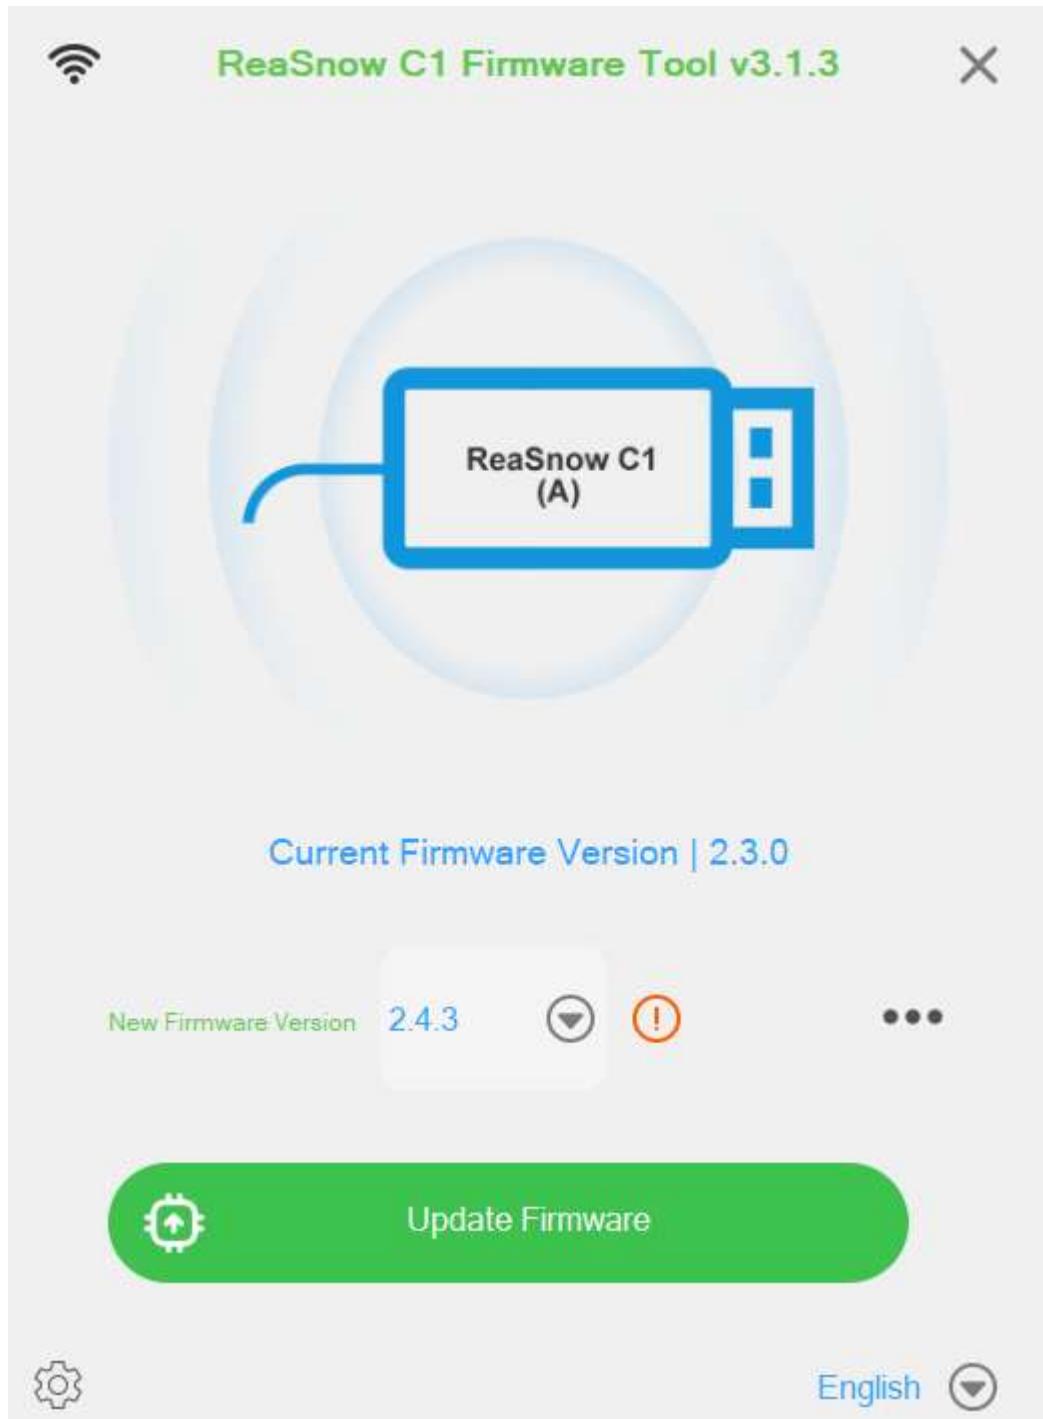

3. Click "...", select the pre-downloaded C1 firmware in the pop-up dialog box(Version 2.4.4), then click "Open"
4. The firmware upgrade program automatically begins the firmware upgrade process, as shown in the figure.

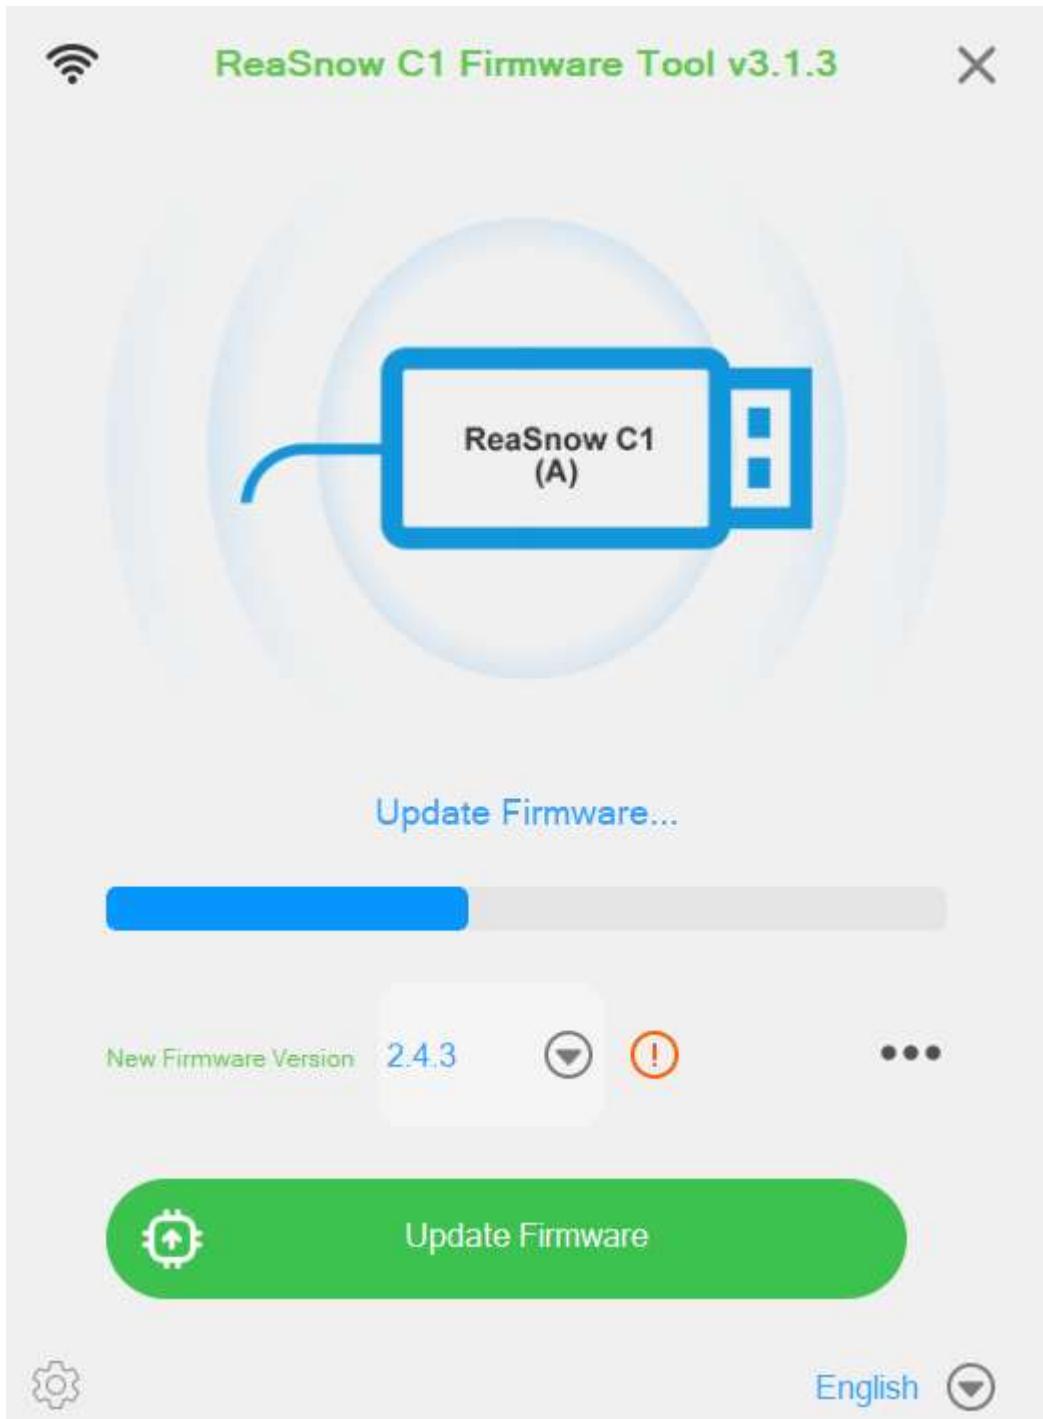

After successful firmware upgrade, as shown in the figure.



ReaSnow C1 Firmware Tool v3.1.3



completed successfully!

OK

New Firmware Version: 2.4.3



...



Update Firmware




English





ReaSnow C1 Firmware Tool v3.1.3

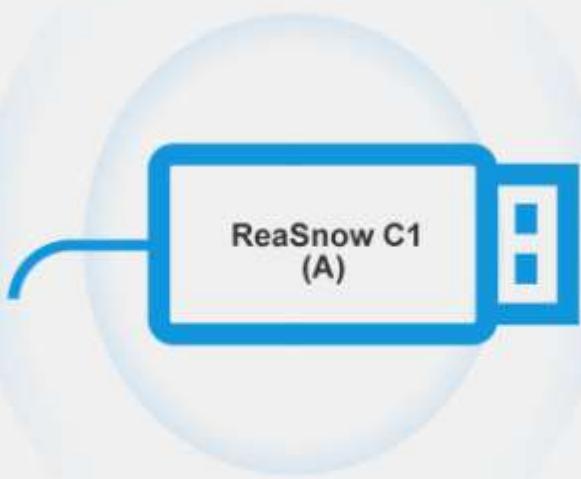

Current Firmware Version | 2.4.4

New Firmware Version: 2.4.3



...



Update Firmware



English



Close the firmware upgrade program. The firmware upgrade process is now complete.