

ReaSnow D1 User Manual

V1.0

Aug, 2023



This manual is the intellectual property of ReaSnow. It must only be published in its original form. Using parts or republishing altered parts of this document is prohibited without permission from ReaSnow.

Table of Contents

Chapter 1: Introduction to ReaSnow D1

1.1 Major Features of ReaSnow D1

1.2 Technical Specifications

1.3 Usage

1.4 Preparation

Chapter 1: Introduction to ReaSnow D1



ReaSnow D1 is a revolutionary PS5 support solution for ReaSnow S1

1.1 Major Features of ReaSnow D1

1. Full PS5 support
2. direct USB connection, no need for remote play
3. no delay
4. support PS5 controller audio
5. plug and play
6. for ReaSnow S1 only




1. **Type C USB:** Connect to PS5 console
2. **Type A USB:** Connect to PS5 controller(DualSense controller)
3. **Type A USB:** Connect to ReaSnow S1
4. **Type C USB:** External power input
5. **LED:** status indicator
6. **Button:** firmware upgrade

1.2 Technical Specifications

Platform	PS5
Support	Direct PS5 support(USB connection)
Play and Play	No need for manual configuration
Temperature	-10~50℃ (14~122°F)
Humidity	Below 90%

1.3 Usage

Mostly, ReaSnow D1 will be used in a way like this:

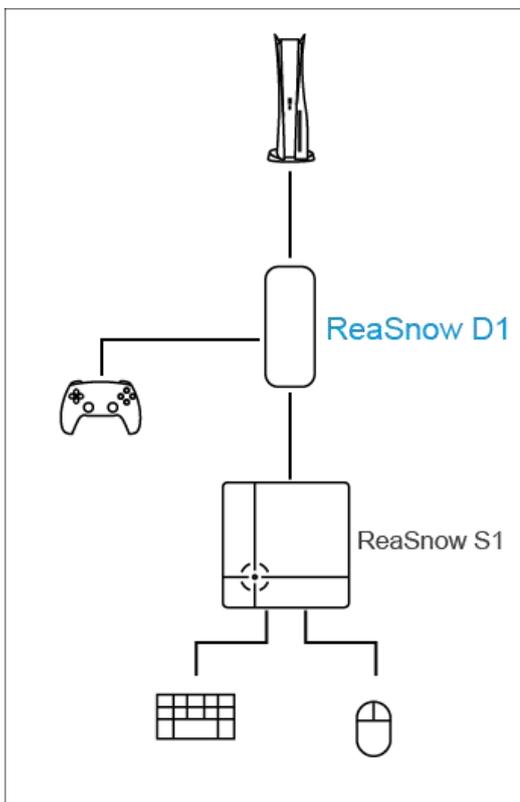

1.4 Preparation

- ReaSnow S1

Upgrade ReaSnow S1's APP and firmware to the latest versions

1. APP: V1.6.9 or later
2. Firmware: V5.6.124 or later
3. set Boot Mode = PS5(D1)

- PS5

This setting shall be done before the usage

Settings->Accessories->Controllers->Communication Method->"Use USB cable"