



Audio settings for USB sound adapter on PS4

Part ONE:


1. Settings

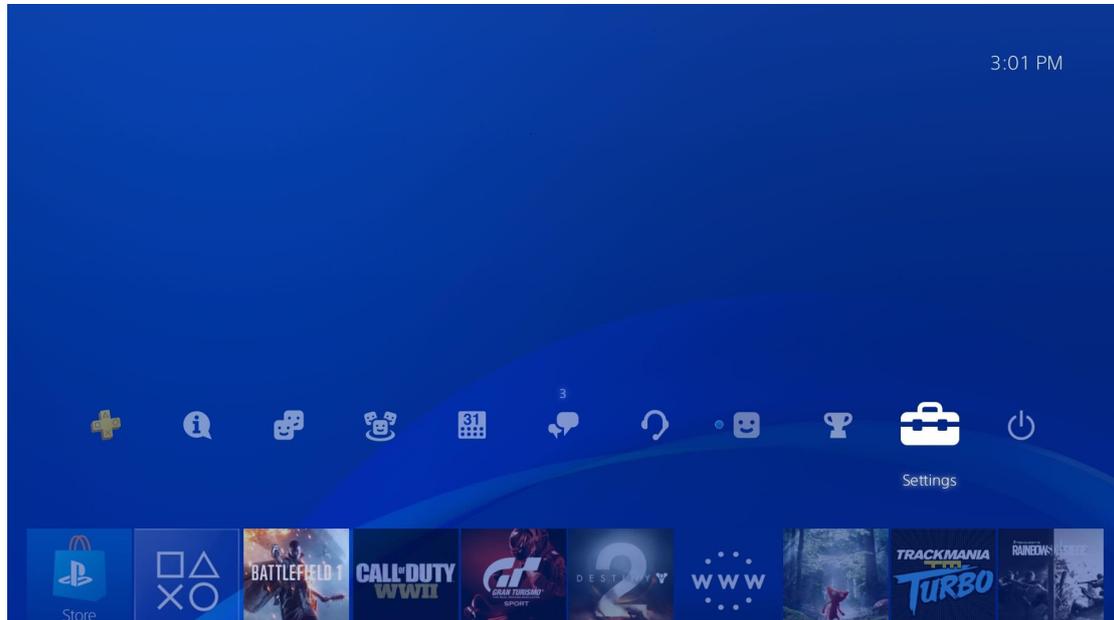


2. Devices

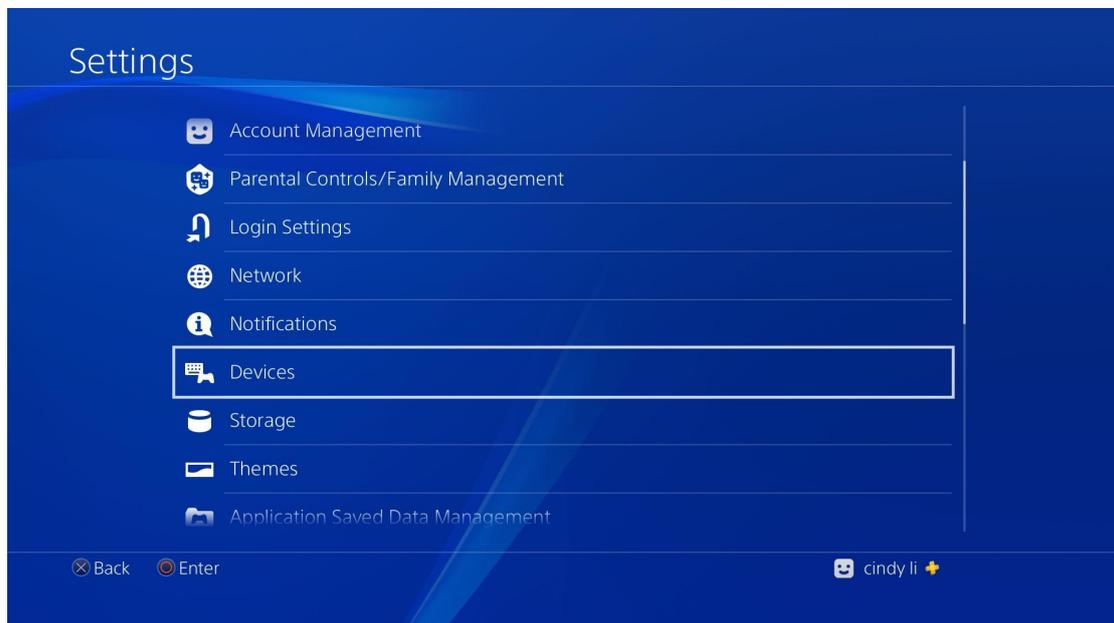


3. Audio Devices

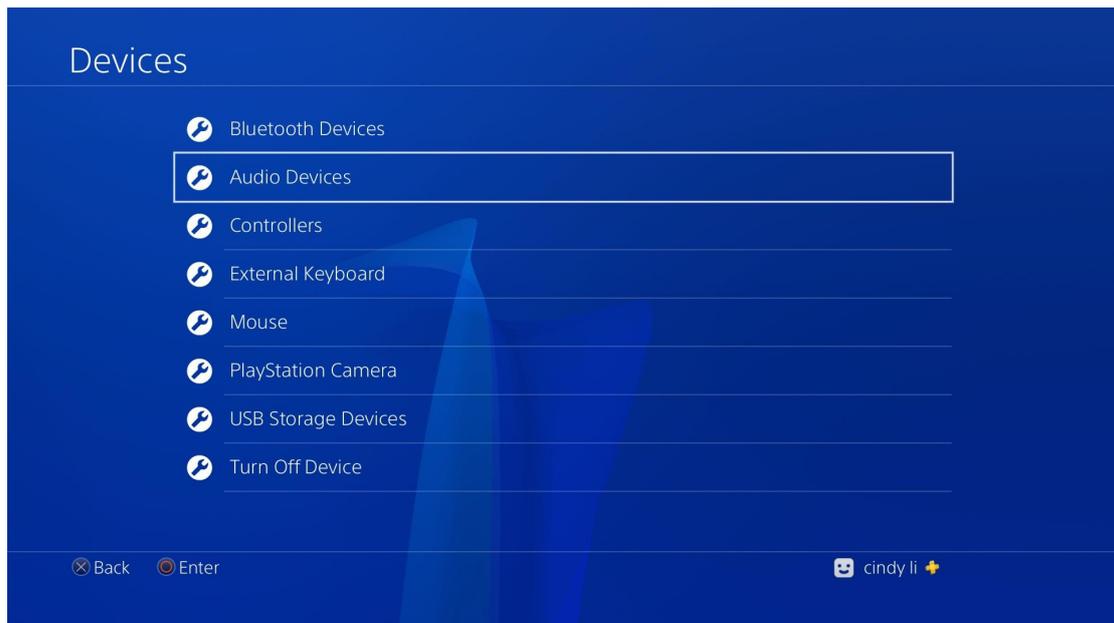

4. Switch Output Device Automatically=ON

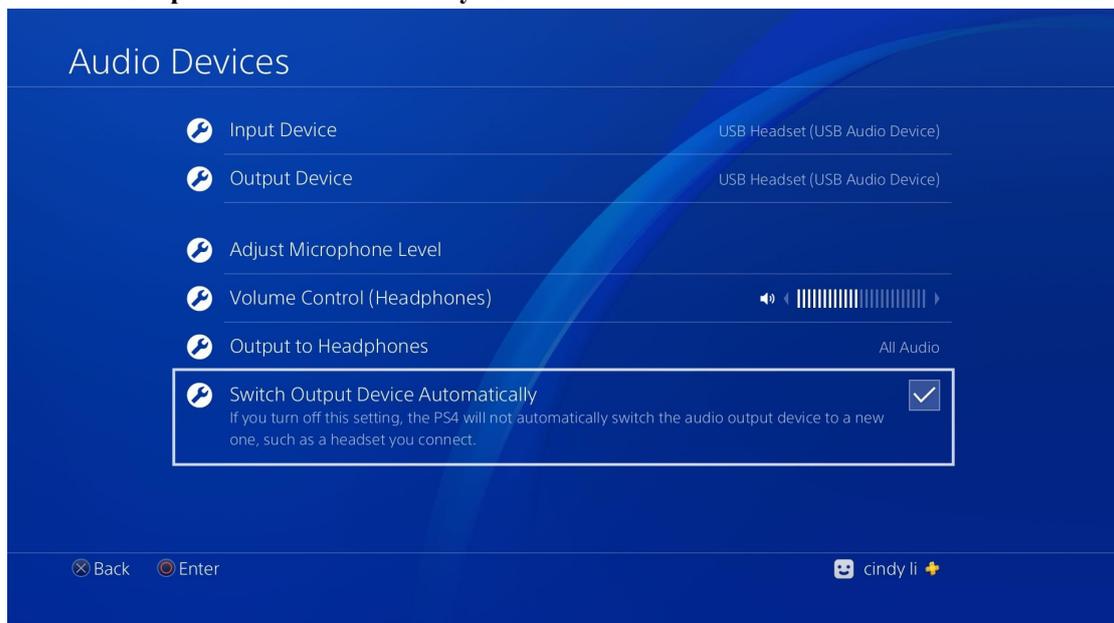

5. Choose “All Audio” or “Chat Audio” for “Output to Headphones”

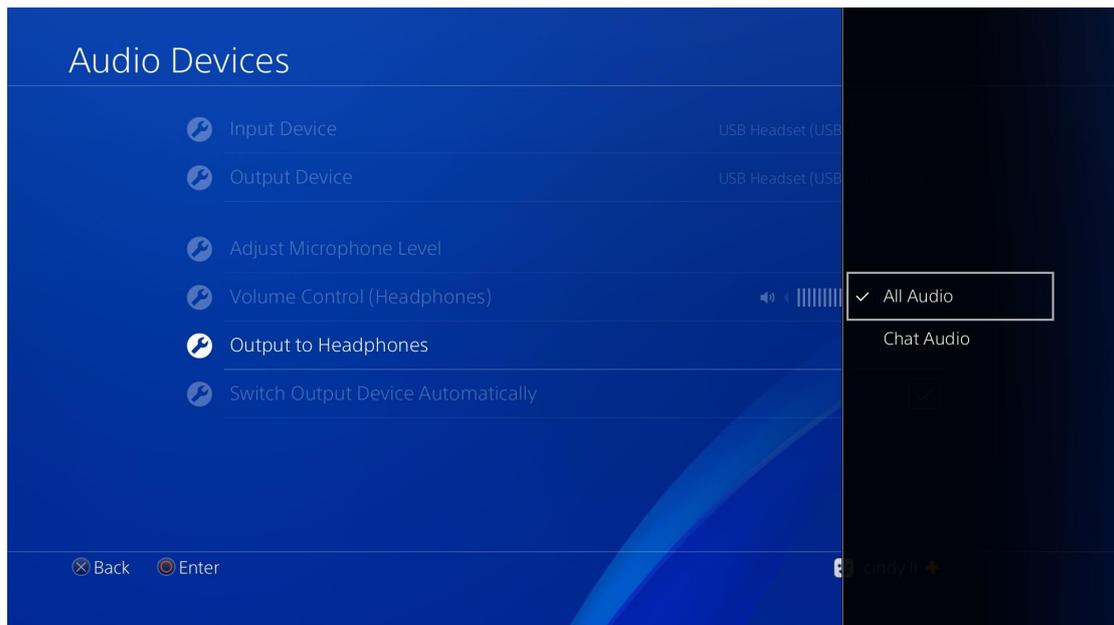


If “All Audio” is your choice, please go to **Part TWO** for further info.


If “Chat Audio” is your choice, there is no need for further settings.

Part TWO:

1. Settings

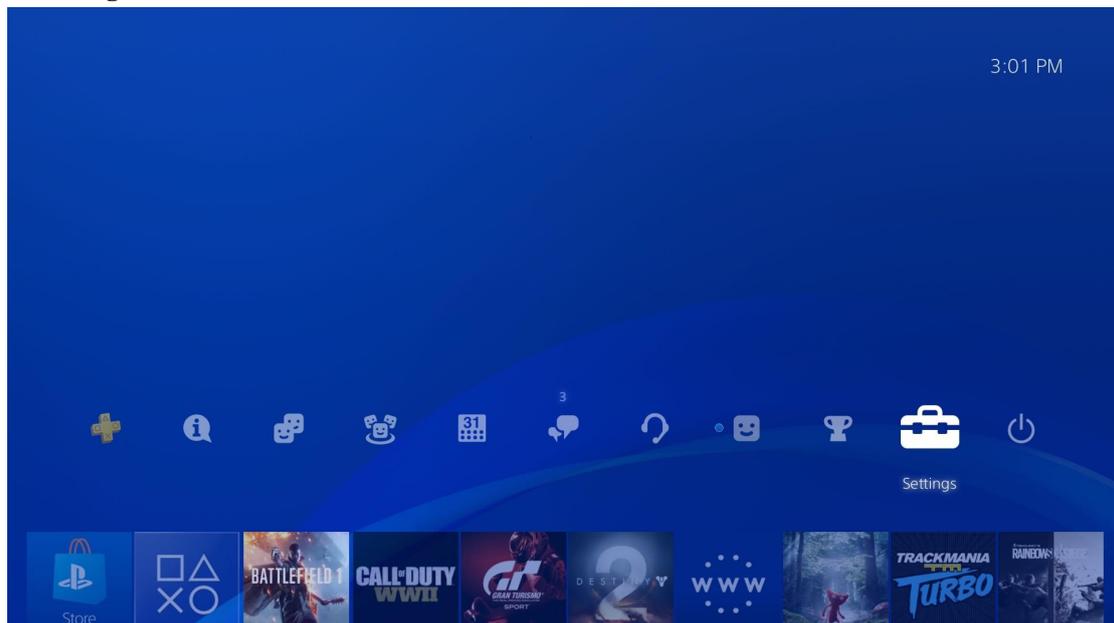

2. Sound and Screen

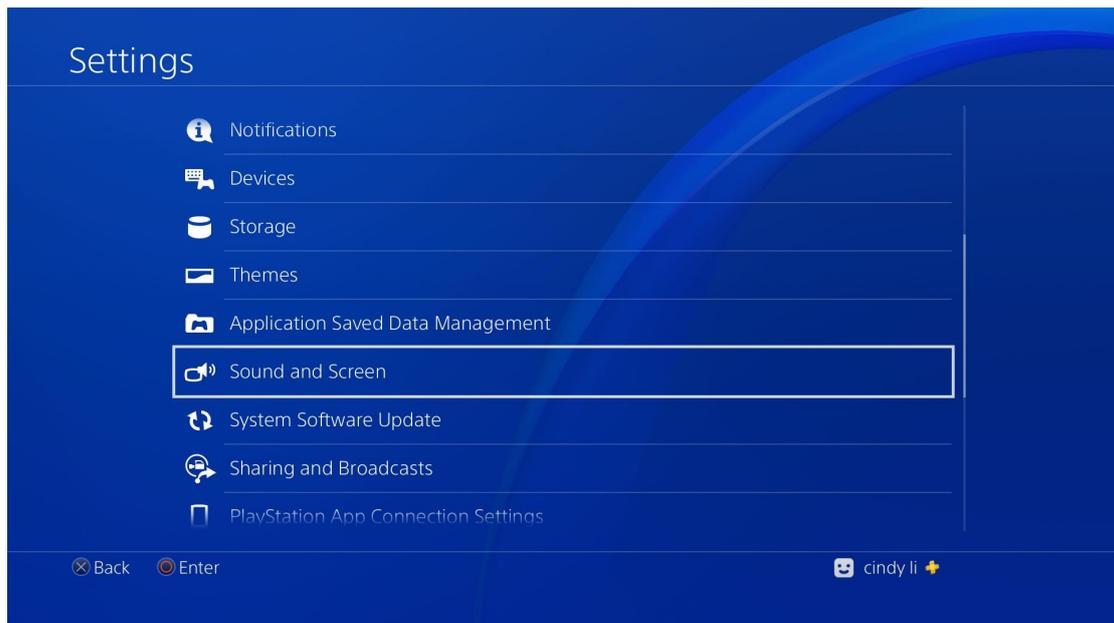

3. If “All Audio” is your choice in **Part ONE,
Please enable “System Music” and “KeyTone” here.
So you can hear all the sound in headphone.**

