

ReaSnow C1 Firmware Upgrade Instructions (V1.1)

1. Download the firmware upgrade program.
2. Double-click to run the program. The interface is shown below.




3. Plug the ReaSnow C1-A (the larger end of the C1 cable) into a computer USB port. The firmware upgrade program's interface after detecting the C1 is shown below.



4. Select the latest firmware version (using version 2.4.4 as an example here), then click the "Start Upgrade" button.
5. The firmware upgrade program will automatically begin the upgrade process, as shown below.

C1 Firmware Upgrade Tool v4.0.0 ×

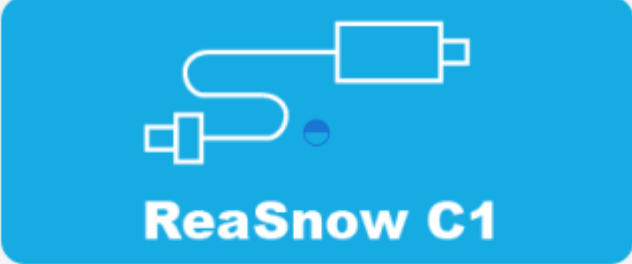

ReaSnow C1

SN: 8ce9045a36cf6d00eee6c077f4798904

45% Writing


Release Notes:

Fix an issue with Apex Legends

Upgrading...

• Online English

Once the firmware upgrade is successfully completed, it will look as shown below.

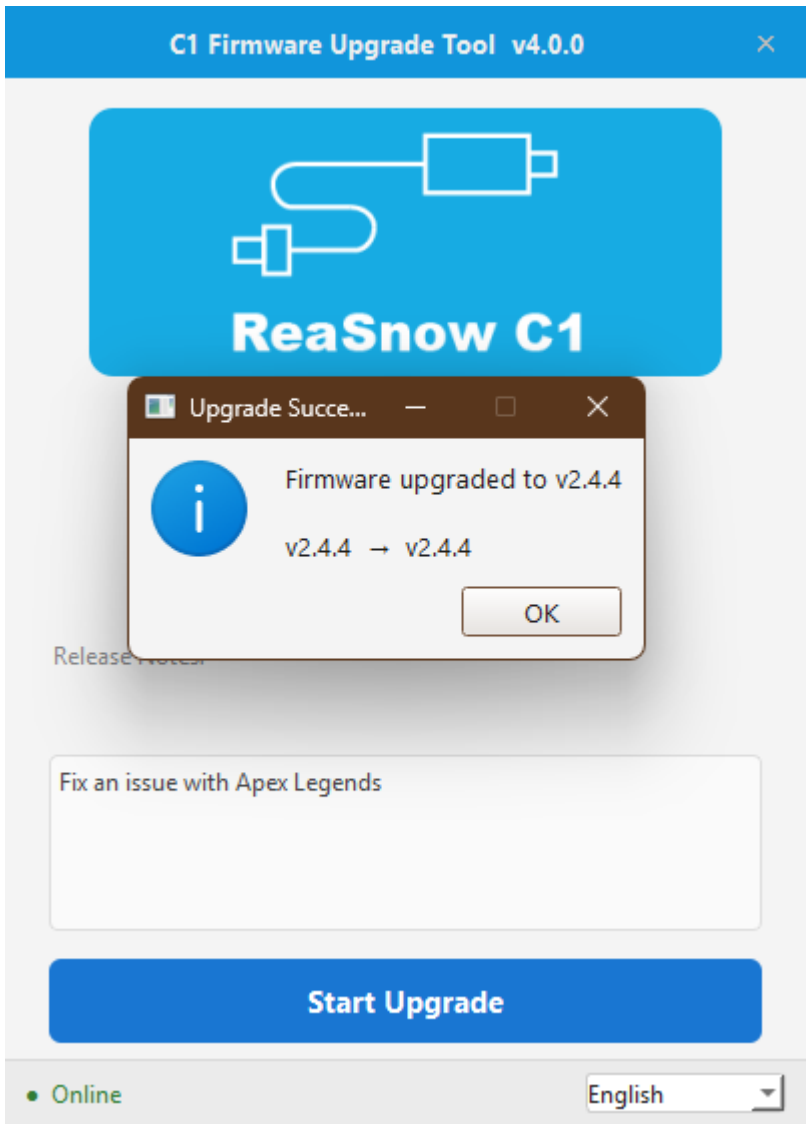

Close the firmware upgrade program. At this point, the firmware upgrade process is complete.