


## A. Prepare for Upgrade

### 1. Check Cross Hair Hardware Version

Run Cross Hair Manager V1.73.13 or previous versions,  
Click “Question Mark” in the lower right corner

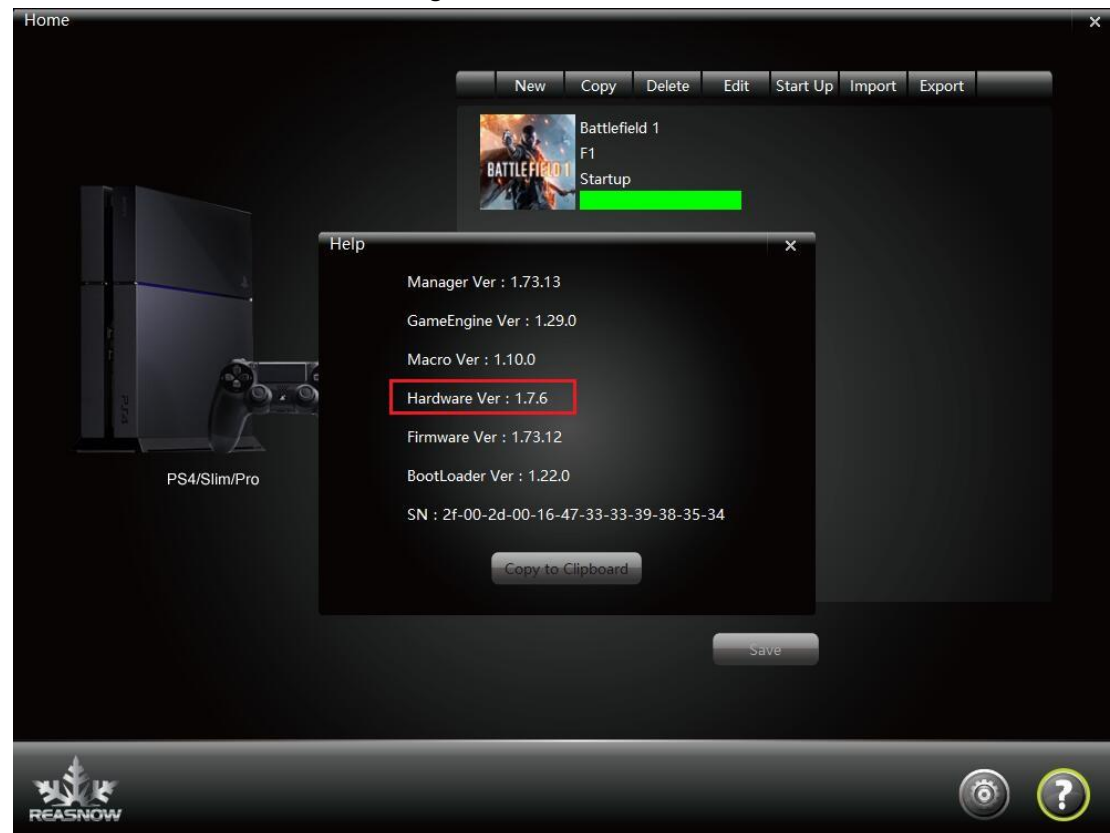

If “**Hardware Ver**” is 1.7.6, this Cross Hair can be upgraded to support Cross Hair Manager V4.X.X, then please go to [Part B](#) for upgrading.

If “**Hardware Ver**” is smaller than 1.7.6, this Cross Hair can not be upgraded to support Cross Hair Manager V4.X.X.


If “**Hardware Ver**” is bigger than 1.7.6, there is no need to upgrade this Cross Hair, please use Cross Hair Manager V4.X.X directly.

**2. Make sure your PC and USB connection between Cross Hair and PC are stable, or it might caused critical destruction to Cross Hair.**


## B. Upgrade

**1. Run “Upgrade Tool V4.0.exe”.**

**2. Plug Cross Hair to PC**

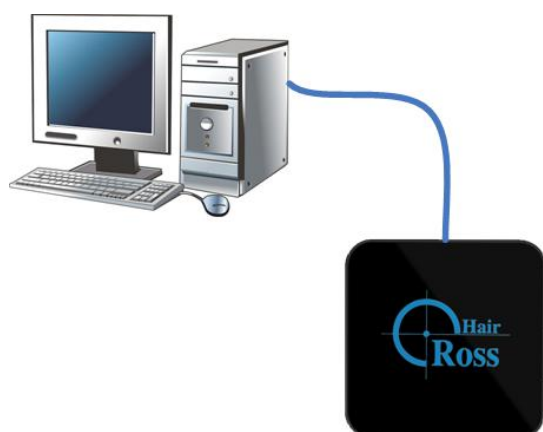




Click "Yes", if you are going to upgrade your Cross Hair.

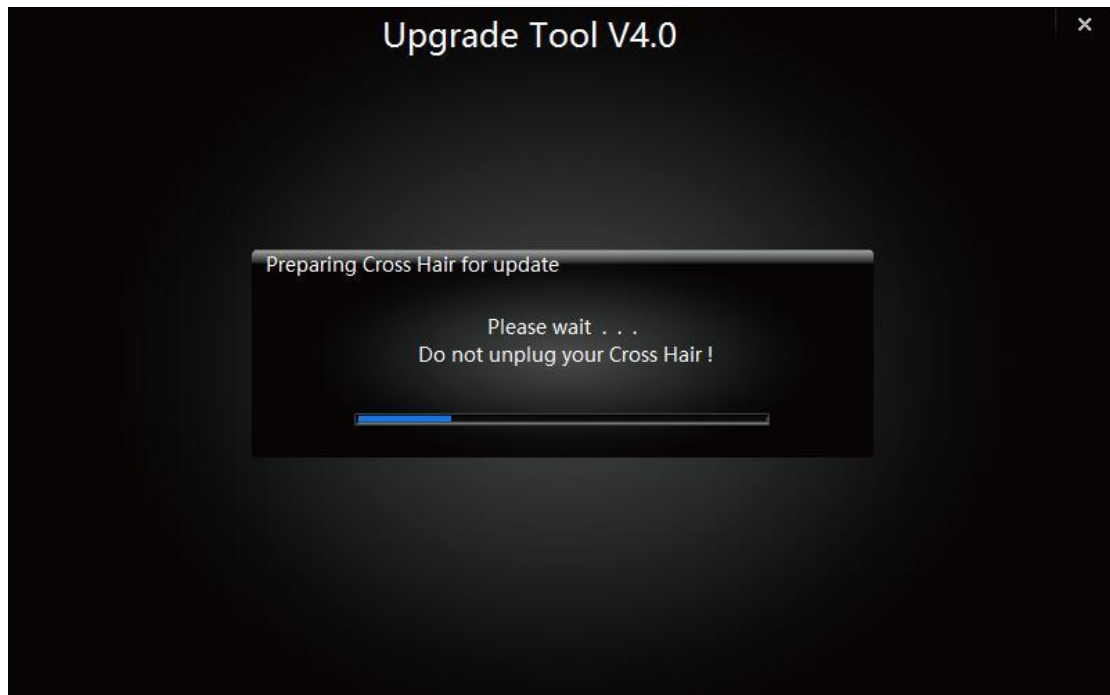

**3. Unplug Cross Hair from PC and then plug it back.**

Wait for automatic upgrade

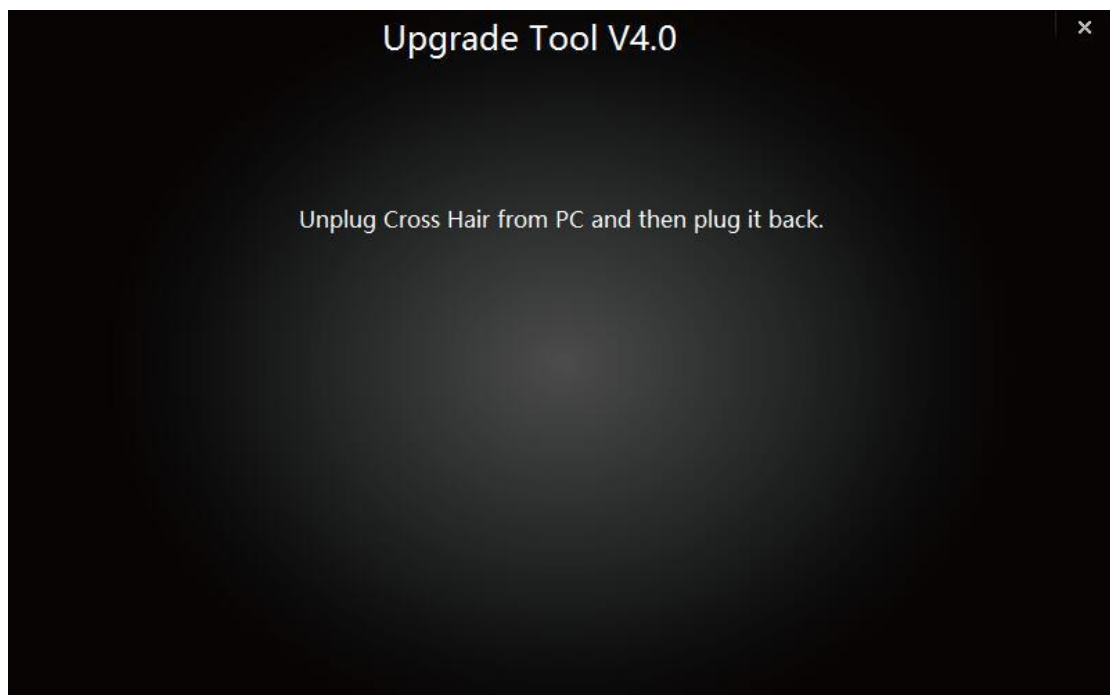

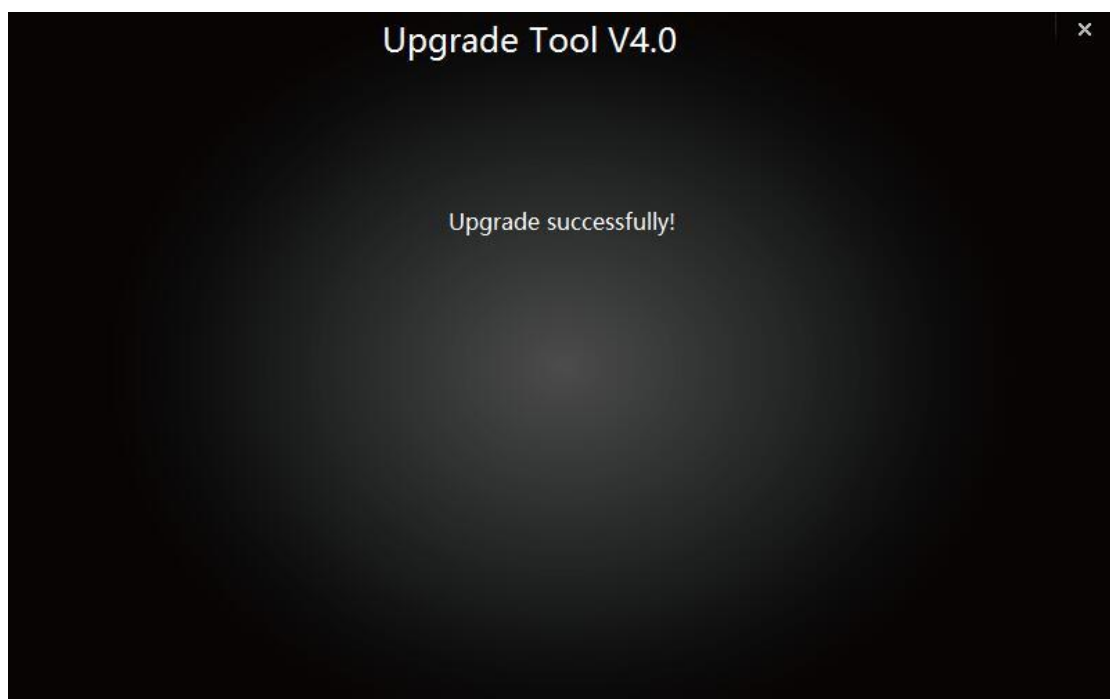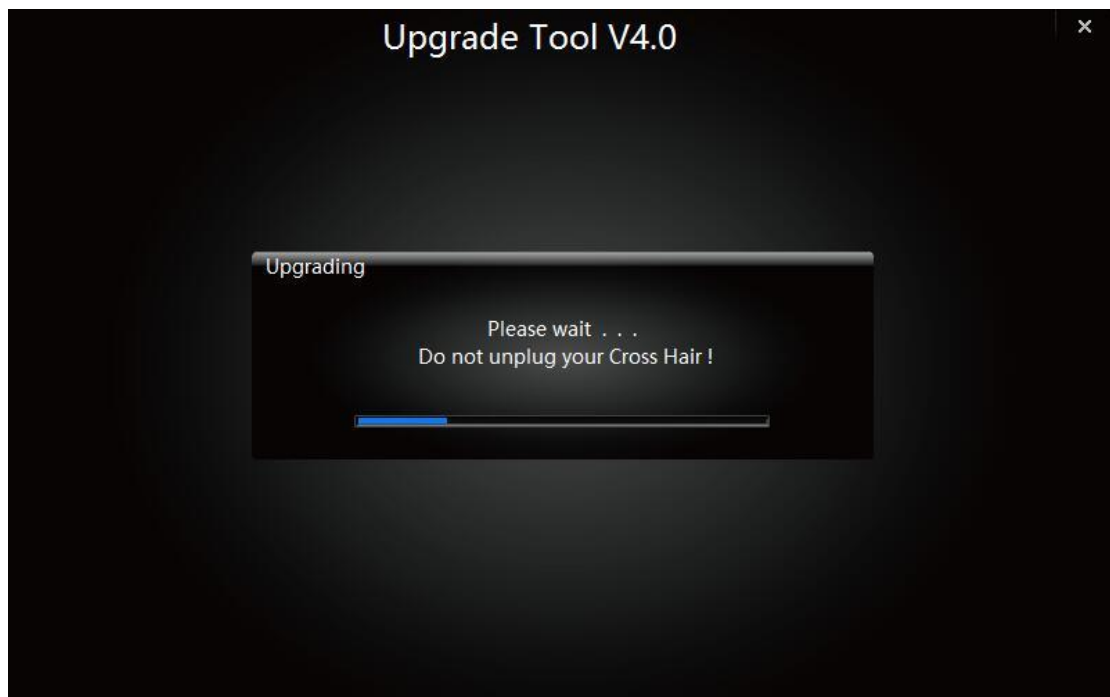

When you see this message, the upgrade is completed.

Please download and run Cross Hair Manager V4.X.X to manage your Cross Hair.